







Danalock V3 SCANDI







www.danalock.com

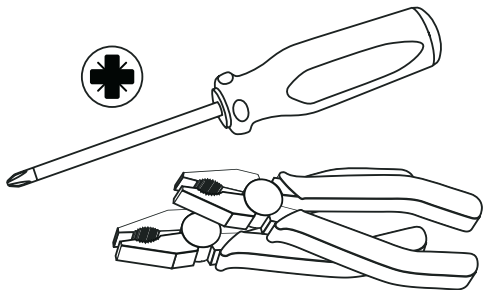


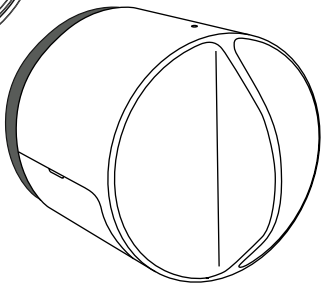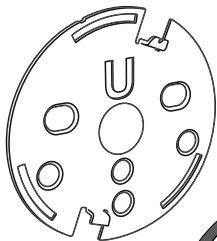


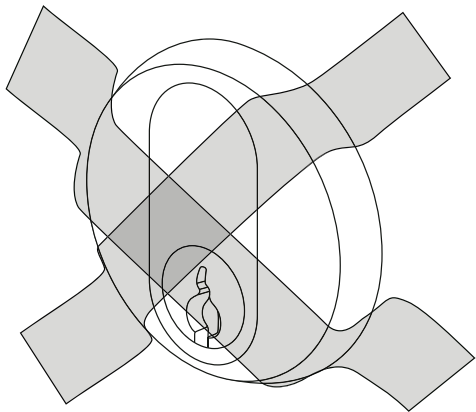




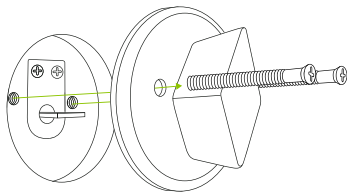
 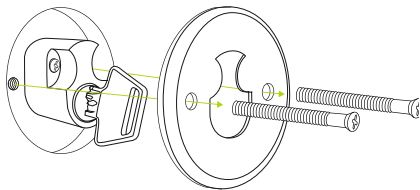


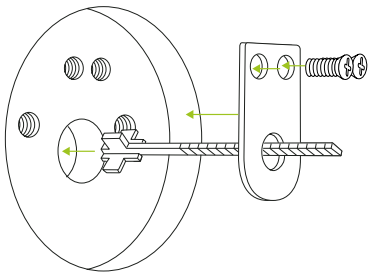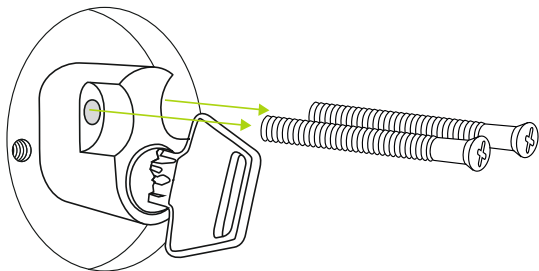



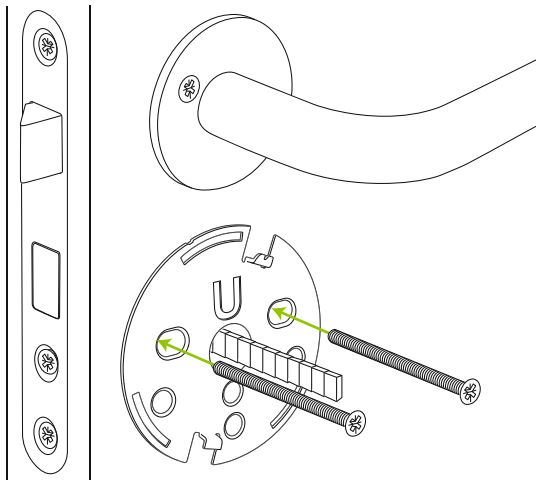


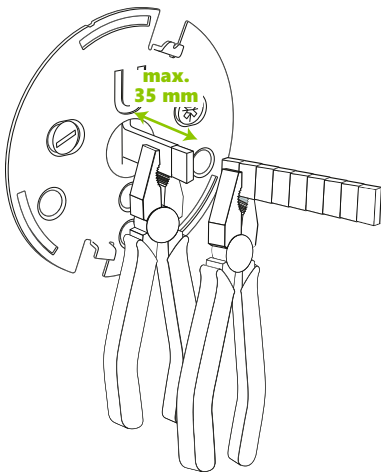


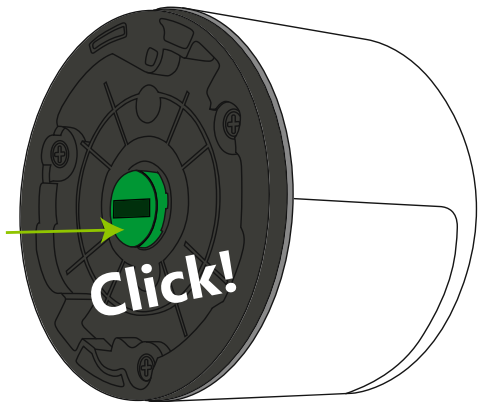

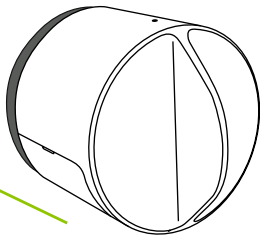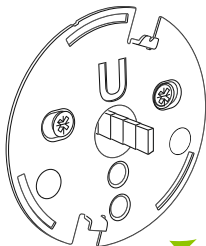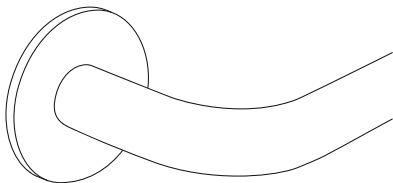

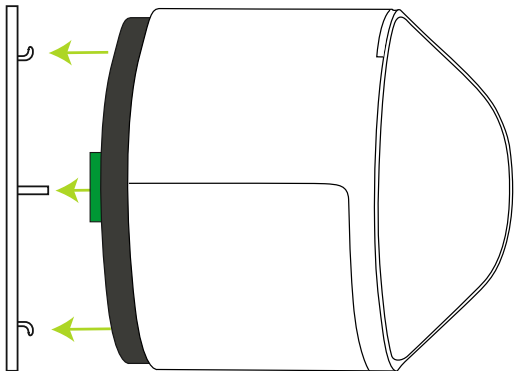

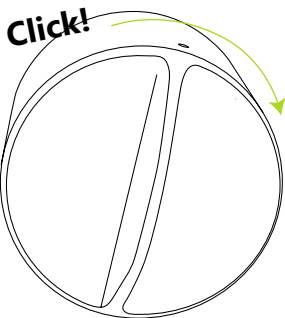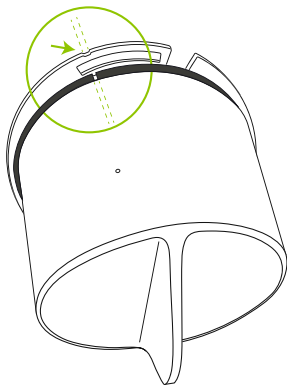

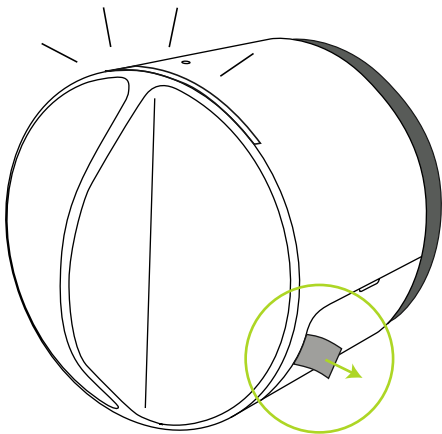

The following instructions are in english. Localized versions can be found with the QR-code below.




guide.danalog.com


Download the Danalock App

Go to Google Play or App Store and download the Danalock App. When the App has been installed, create a user profile and sign in. You will use this profile each time you sign into the App.


You can now add your Danalock to your keychain in the App.

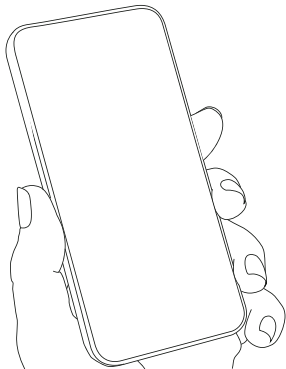



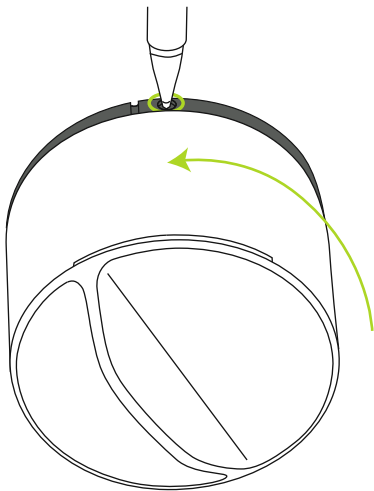

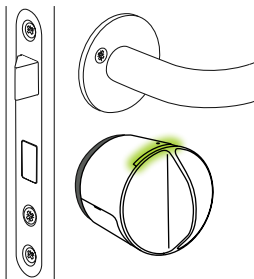

Dismounting



LED-Signals




LED-Mode	LED color	Status indication
Constant red till light finishes		Lock has successfully locked
Constant green till light finishes		Lock has successfully unlocked
Constant white for 3 seconds		Power on. Batteries are activated
Red light flashes every 5 minutes		Critical battery level
Constant purple		Firmware is being updated
Blue light flashes		Settings are changed/saved

Configuring the Danalock V3 with click-commands

You can configure the Danalock via the button found in the small hole on the top of the lock. When you click through settings, the LED will change color according to the scheme on the next page.

When you get to the setting you want to change, wait for 5 seconds and the Danalock will react to your command. If you make a wrong number of clicks, just stop at a number of clicks where the LED doesn't light up and wait for 5 seconds. The LED will flash red to indicate that it has timed out.

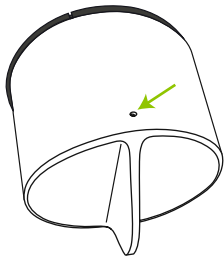

Clicks	Color	Activity
1	Green	Inclusion mode
This mode is used to in- or exclude your Danalock with a Z-Wave or Zigbee gateway. When the Danalock blinks green it is in ex/inclusion mode and you have 30 seconds to pair the Danalock with a gateway.		
2	Yellow	Manual calibration
Turn the Danalock to the desired unlocked position. Start the calibration with the click command and wait for the LED to start blinking yellow. Turn the Danalock to the desired locked position while the LED blinks and click the button once to save the locked position. If the lock doesn't receive a response from you within 30 seconds the calibration will be canceled.		
3	White	Auto calibration
Turn the Danalock to unlocked position and lift the handle if needed. Leave the door open while the Danalock auto calibrates. Start the auto calibration with the click command. The Danalock will blink white while auto calibrating.		
7		Cancel
10	Red	Reset user settings
This action deletes all user settings on the Danalock. The Danalock responds by blinking red.		

Danalock International ApS

Gammel Stillingvej 427C
8462 Harlev, DK

+45 4242 8122
info@danalock.com